


3 Installation and commissioning

3.3.6 Fitting equipment on the robot (robot dimensions)


Continued

Maximum allowed arm load depends on center of gravity of arm load and robot payload.

Holes for fitting extra equipment

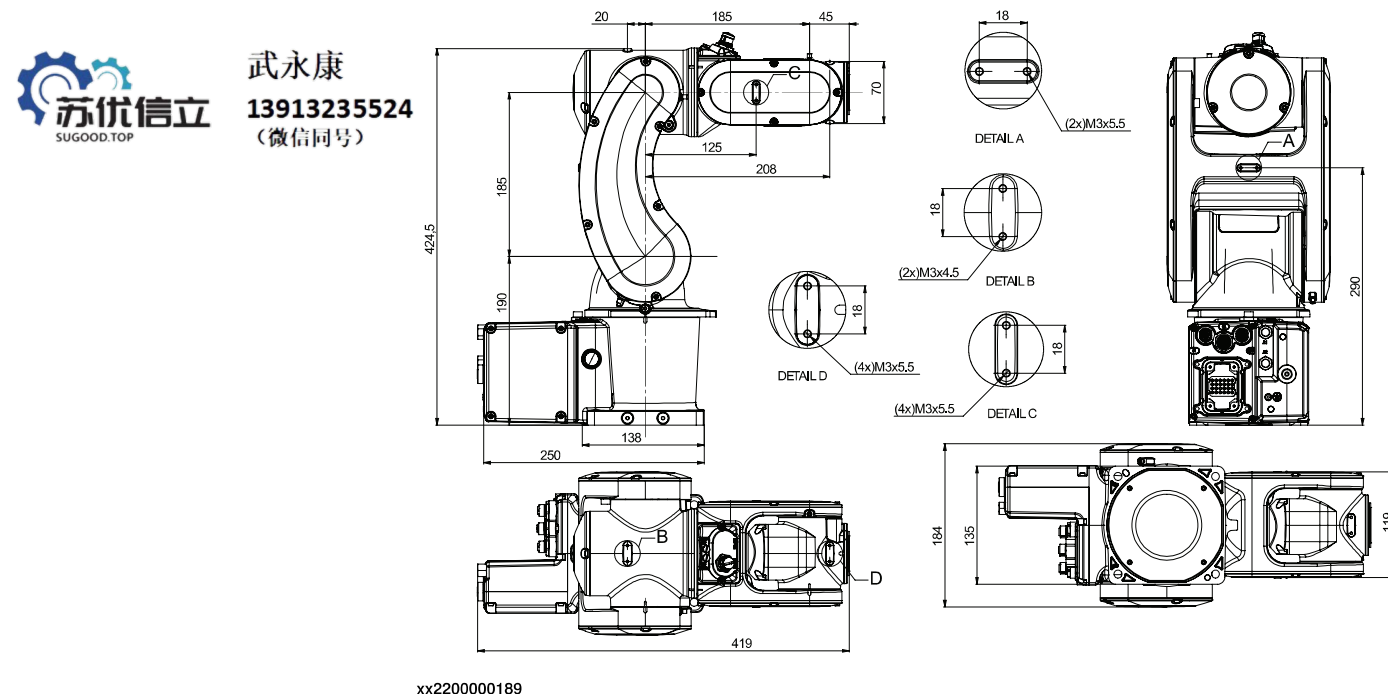

Tool flange standard

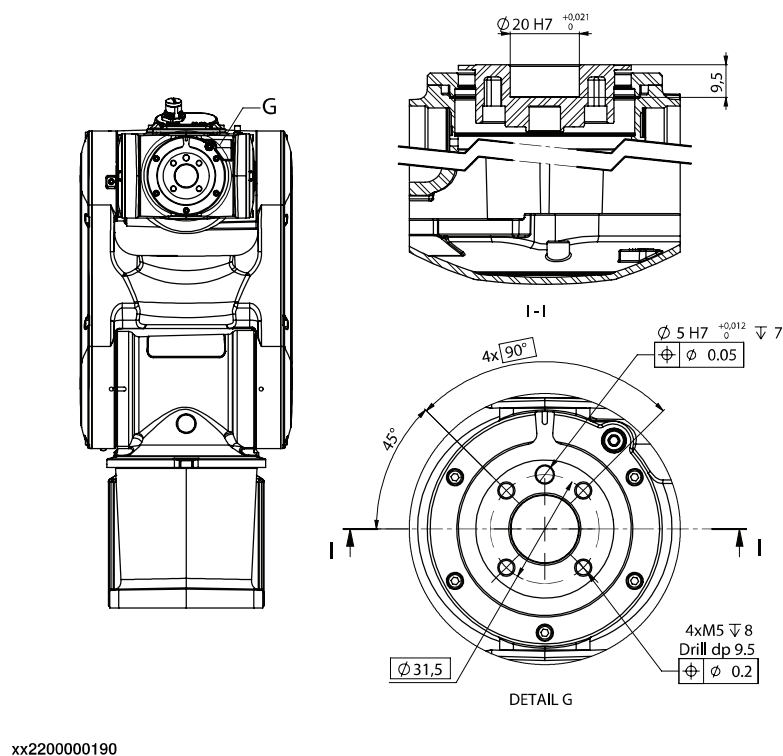

Continues on next page